ARAT Navigation mount

Car Manufacturer: FORD

TYPE: MONDEO (96 model onwards)

Part No: NS1044.2

ARAT GmbH
Spezialhalterungen
für Autotelefone u. -Navigationssysteme
...the world of communication

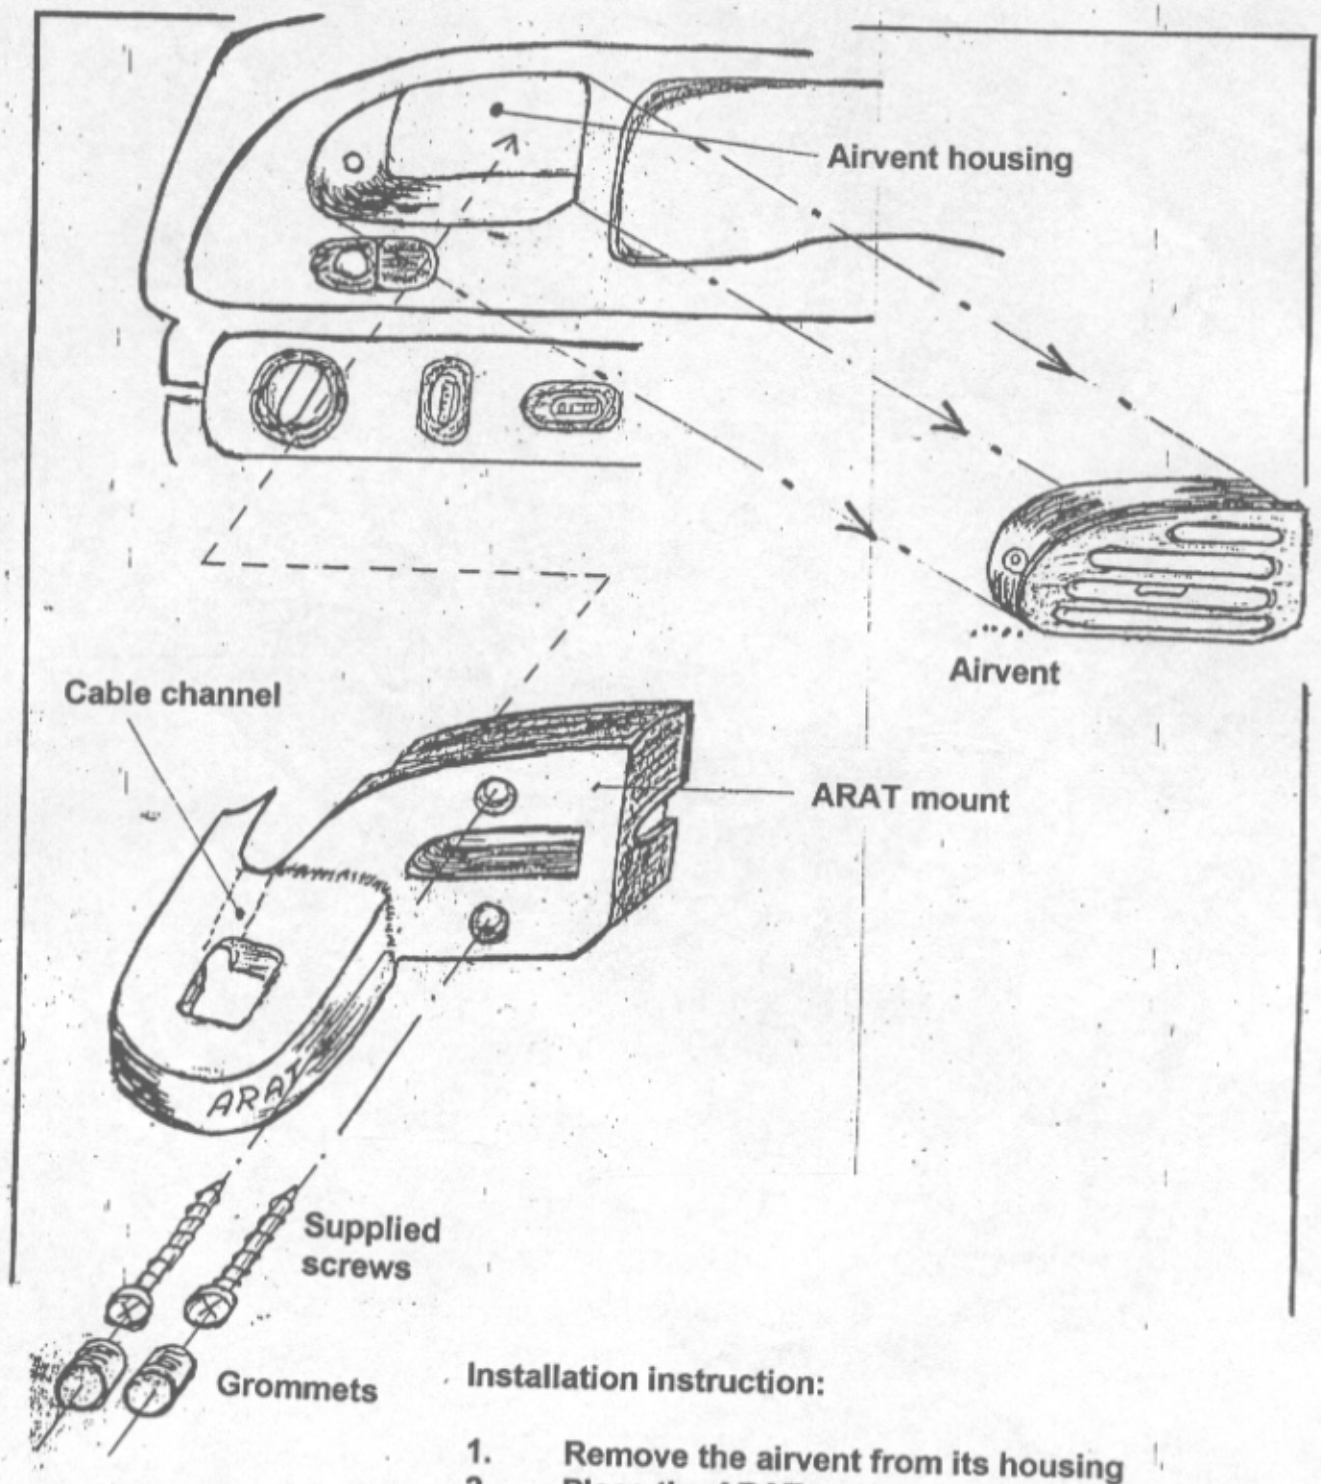

Installation instruction:

1. Remove the airvent from its housing
2. Place the ARAT mount into the airvent housing
3. Secure the mount with the two (2) screws provided
4. Place the grommets over the screw heads
5. Place the cable in the preformed channel in the mount.